




## Asterix ST-EP4 Printer Installation Guide

This guide will walk you through connecting the Asterix ST-EP4 printer to an Altametrics e\*Smart All-in-One Station.

## Introduction

If your **S-Line** Series POS station comes with a built-in receipt printer in the base of the computer, it is already connected by default to **COM1** on the computer. It is also possible however to connect an **Asterix ST-EP4** thermal remote printer to an **S-Line** Series terminal to work with Hula POS by following the steps outlined below.

1. Connect the included black 25-pin DB connector to the labeled 25-pin RS-232 port on the back of the printer.

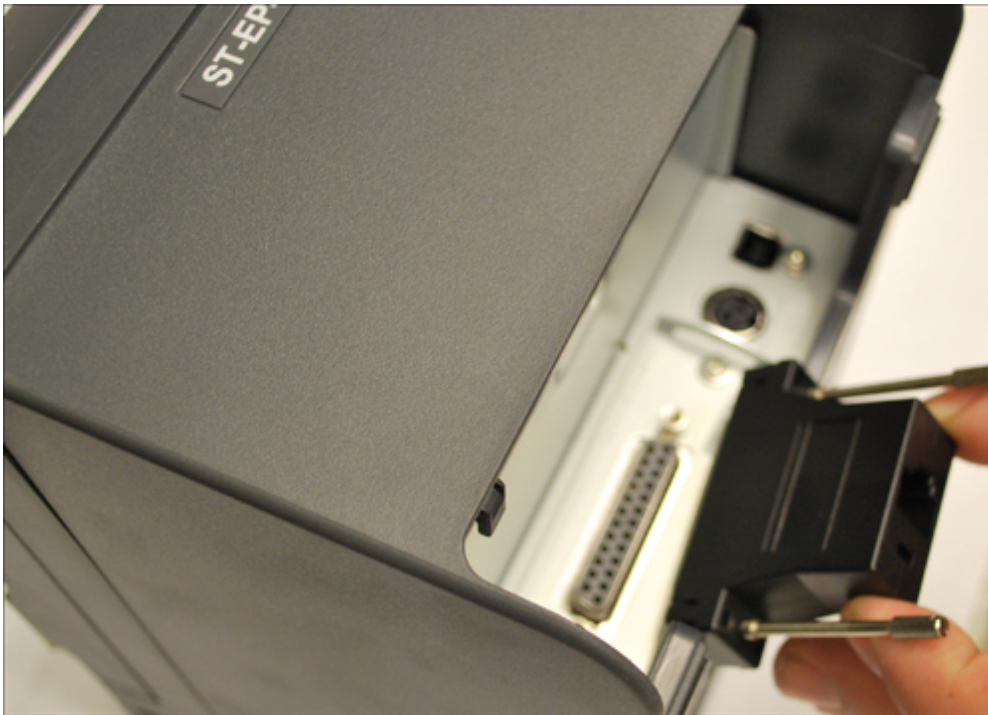

2. Connect the power supply to the designated 24V power port, also located on the back of the printer.



3. Connect the included RJ-45 Ethernet printer cable to the 25-pin DB connector that we connected in **Step 1**.



4. Connect the other end of the RJ-45 Ethernet cable to the desired COM port on the computer. In our example below, we are connecting our printer to COM2. **Note:** It is a good idea to note down which COM port the printer has been connected for future reference as you will need this information when configuring the printer(s) in the Hula software.



5. Your printer is now physically connected to the station. For instructions on enabling and configuring printers in the HulaPOS software, please refer to our **Getting Started Guide**.